

COLOUR

TIMER button: Controls timer settings to turn off fireplace at selected time. Settings range from 0.5 hours to 7.5 hours.

1. Press once. Indicator light turns on. Timer is set to 0.5 hours.

2. Press again until desired setting is reached. Indicator lights show setting.



! DO NOT OPEN any panels. No user-serviceable parts inside!



turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury .

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.
- Store heater in a clean dry place when not in use.



of the internal or electrical parts should be performed by the consumer. Do not service the unit yourself.