

MEDIA-STONES-2, MEDIA-STONES-WH
MODELS: RAVE3012I, RAVE4013I, RAVE4013I-C, SLR-B, SLR-C, SLR32,
XLR-AU, XLR-CE, XLR-PLUS-AU
- Installation Instructions -



Leave this manual with party responsible for use and operation.

WARNING! Choking Hazard! Keep stones out of reach of children.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

INSTALLATION

1. Position rock media placement jig over pilot shield to prevent inadvertent rock placement in front of pilot shield.
2. Figure 1 denotes the outline of the media tray edges. DO NOT install stone media in the outlined area. This may cause delayed ignition, undesirable burner flame, or lighting issues.


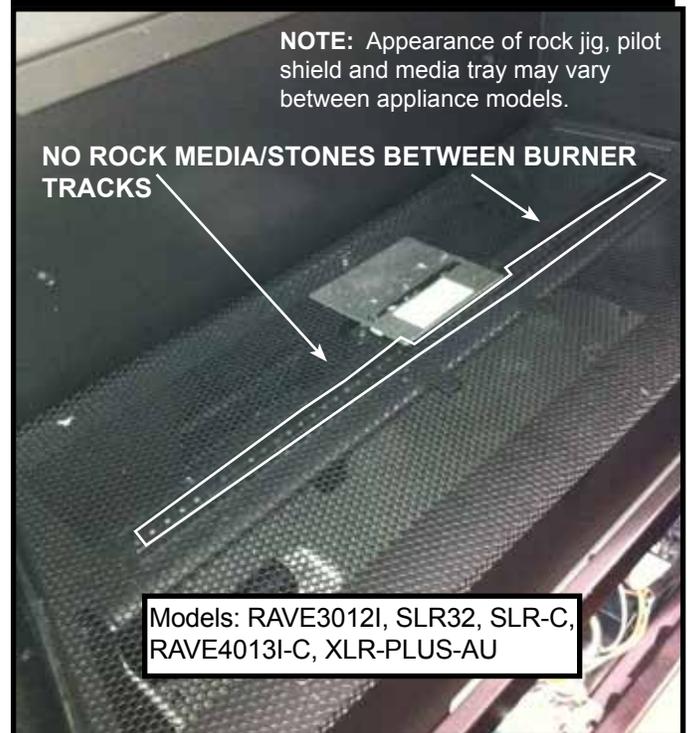


Figure 1. Rock Media Placement Jig

⚠ WARNING

Delayed Ignition Risk

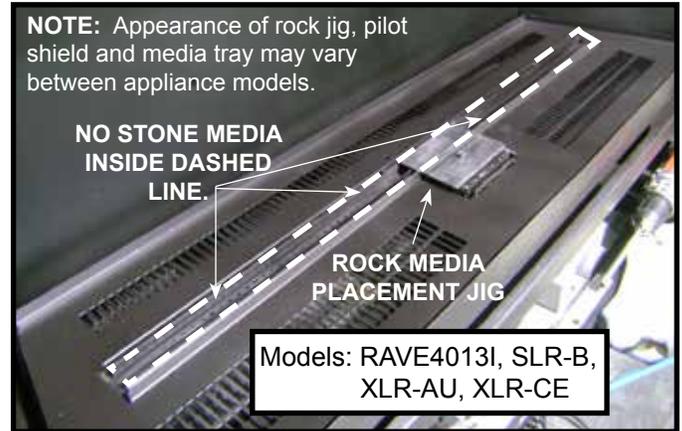

- Place stones according to instructions.
- Do NOT place stones in area in front of pilot or between burner tracks.
- Do NOT place stones in a position that they may fall into area in front of pilot.
- Do NOT use any media other than the stones supplied with this fireplace.

Fireplace will not function properly. Delayed ignition may occur.

NOTE: SLR32/RAVE3012I will not use all the stones included in the kit.

NOTE: RAVE3012I and RAVE4013I-C models will need to have factory-installed cover tray removed prior to media installation. See appliance install manual.

NOTE: For SLR-C/RAVE4013I-C models, a 3/8 inch setback from the burner rails is recommended to prevent edges of rock from overhanging rail.

3. **MEDIA-STONES-2:** Place the large white colored stones around the media tray. See Figure 2.

MEDIA-STONES-WH: See Step 4.



Figure 2. Place Large White Stones

4. **MEDIA-STONES-2:** Place large gray and black stones as shown in Figure 3.

MEDIA-STONES-WH: Place large stones as shown in Figure 3.



Figure 3. Place Large Gray and Black Stones

5. **MEDIA-STONES-2** and **MEDIA-STONES-WH:** Remove rock media jig. Place one large stone on top of the pilot shield.

6. **MEDIA-STONES-2:** Place the remainder of the small white, gray and black stones around the media tray to fill in any open spaces. See Figure 4.

MEDIA-STONES-WH: Place the remainder of the small white stones around the media tray to fill in any open spaces. See Figure 4.



Figure 4. Place Small Stones

Shutter Settings

	USA/Canada	Europe	AU	NZ
NG	1/16 in.	.2 cm	2 mm	2 mm
LP (Propane)	5/16 in.	.8 cm	8 mm	8 mm
Butane*	N/A	Full Open	Full Open	Full Open

*Butane gas is only approved for use in Europe, Australia, and New Zealand

XLR-Plus Shutter Settings

	AU	NZ
NG	6 mm	6 mm

SLR32/RAVE3012I Shutter Settings

	USA/Canada
NG	1/8 in.
LP (Propane)	1/4 in.

SLR-C/RAVE4013I-C Shutter Settings

	USA/Canada
NG	3/16 in.
LP (Propane)	9/16 in.

Please contact your Hearth & Home Technologies dealer with any questions or concerns.
 For the location of your nearest Hearth & Home Technologies dealer, please visit www.fireside.com.
 Hearth & Home Technologies Inc.
 7571 215th Street West, Lakeville, MN 55044
www.fireside.com